 



# Иллюстрация Illustrated parts list

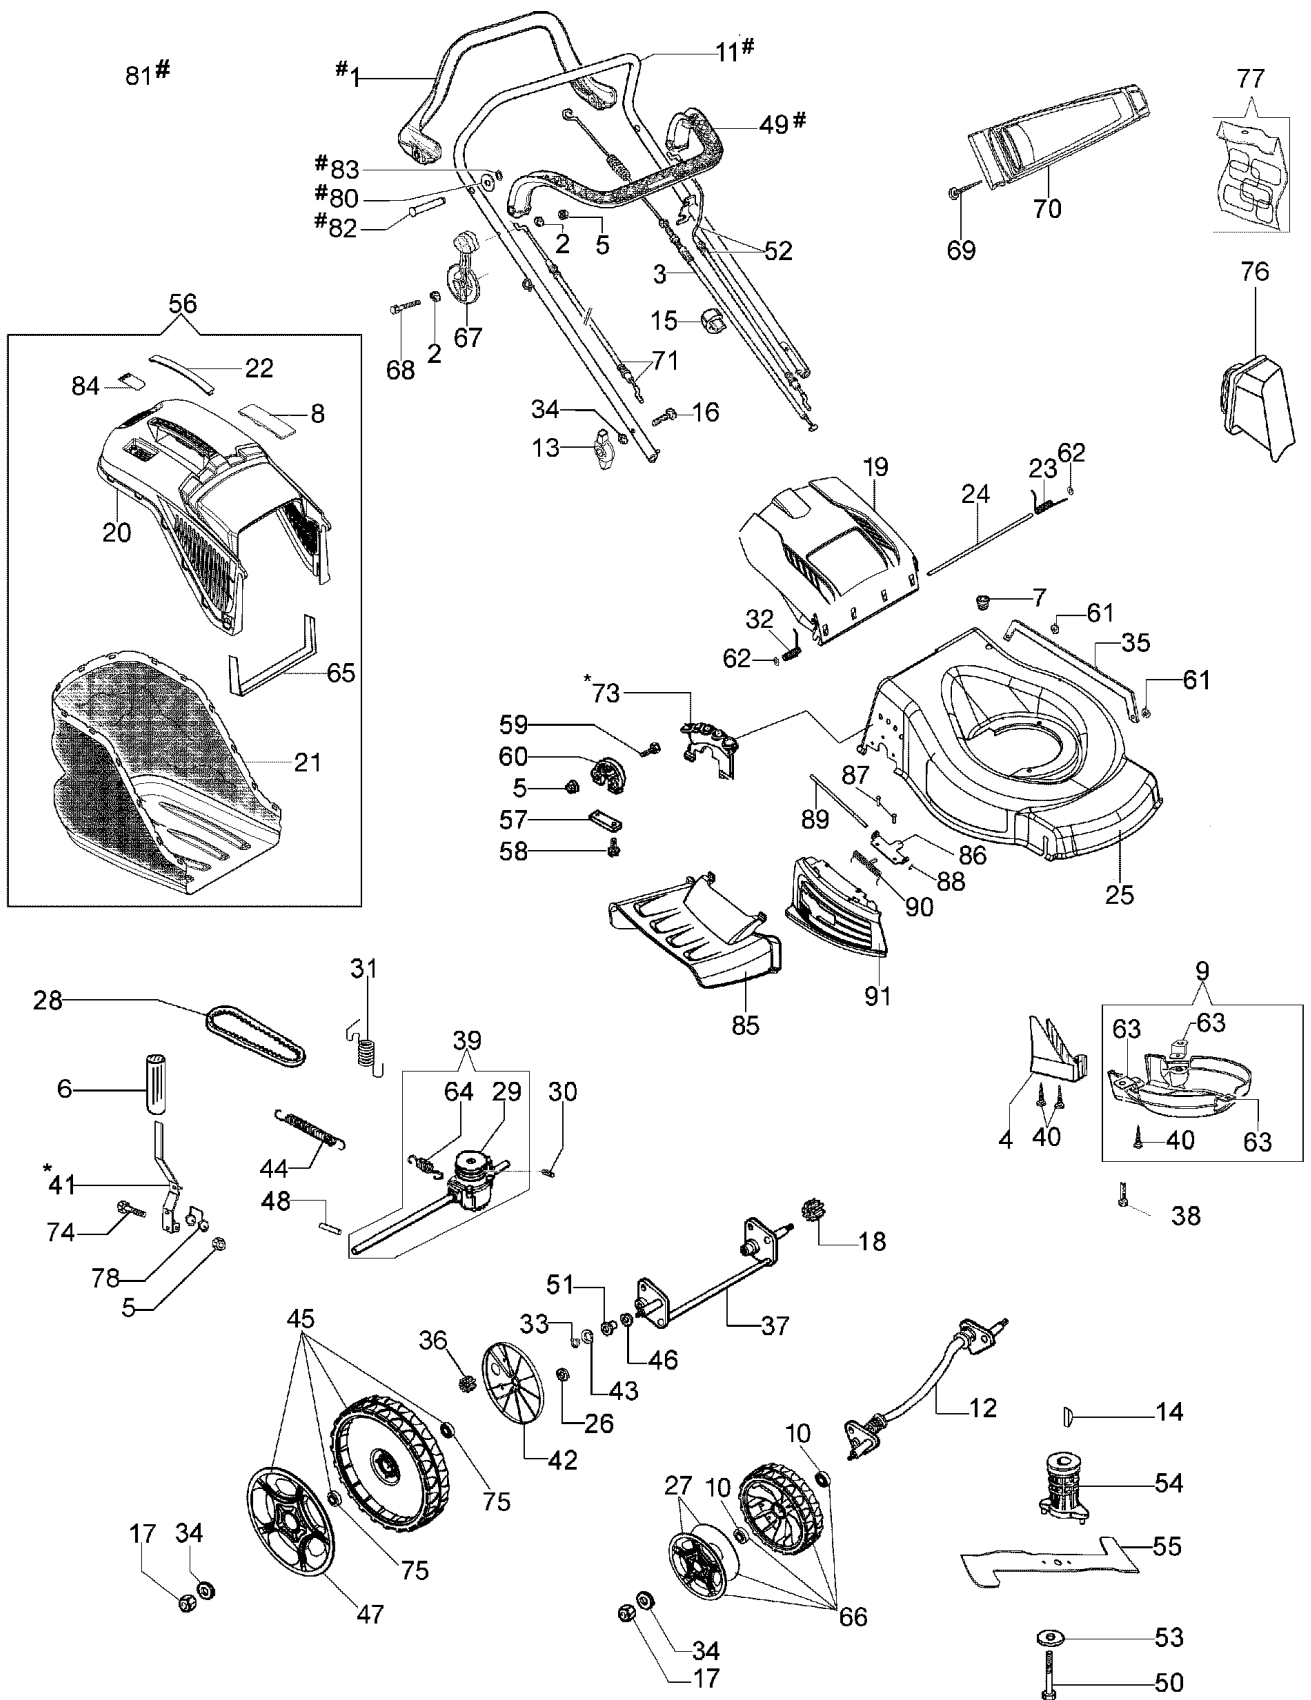

## Иллюстрация Illustrated parts list

Ссылка	Кол-во	Код артикула	Наименование
1	1	66060398AR	Lever
2	2	3918009R	Washer
3	1	66060058CR	Tract.wire
4	1	66070032AR	Guard
5	7	3914006R	Nut
6	1	66070309R	Knob
7	1	66030038	Grommet
8	1	66070466R	Lock
9	1	66070233	Compl. guard
10	8	66030081R	Bearing
11	1	66060421BR	Handle
12	1	66070292R	Front axle
13	2	66070317R	Tightening handle
14	1	8202126R	Key
15	2	66060231	Band
16	2	3910015R	Screw
17	4	3933032R	Nut
18	1	66030228	Left sprocket
19	1	66070519R	Cover
20	1	66070453R	Frame
21	1	66070457R	Grassbag
22	1	66070523R	Case cover
23	1	66110493R	Spring
24	1	66110026R	Deflector axle
25	1	66070536R	Deck
26	2	3916012	Washer
27	2	66070573R	Wheel cover
28	1	3047025R	Belt
29	1	66070450R	Pulley
30	1	3803010	Screw
31	1	66070035AR	Spring
32	1	66110494R	Spring
33	4	3024012	Ring
34	7	3916008R	Washer
35	1	66070229	Tube
36	1	66030227R	Right sprocket
37	1	66070287R	Rear axle
38	3	3806076	Screw
39	1	66070017DR	Transmission
40	5	011200035R	Screw
41	1	66070286BR	Lever
42	1	66070469R	Wheel cover
43	1	66030044	Whaser
44	1	66070036R	Spring
45	2	66070627	Wheel kit
46	2	8202311	Ring


 
# Иллюстрация Illustrated parts list

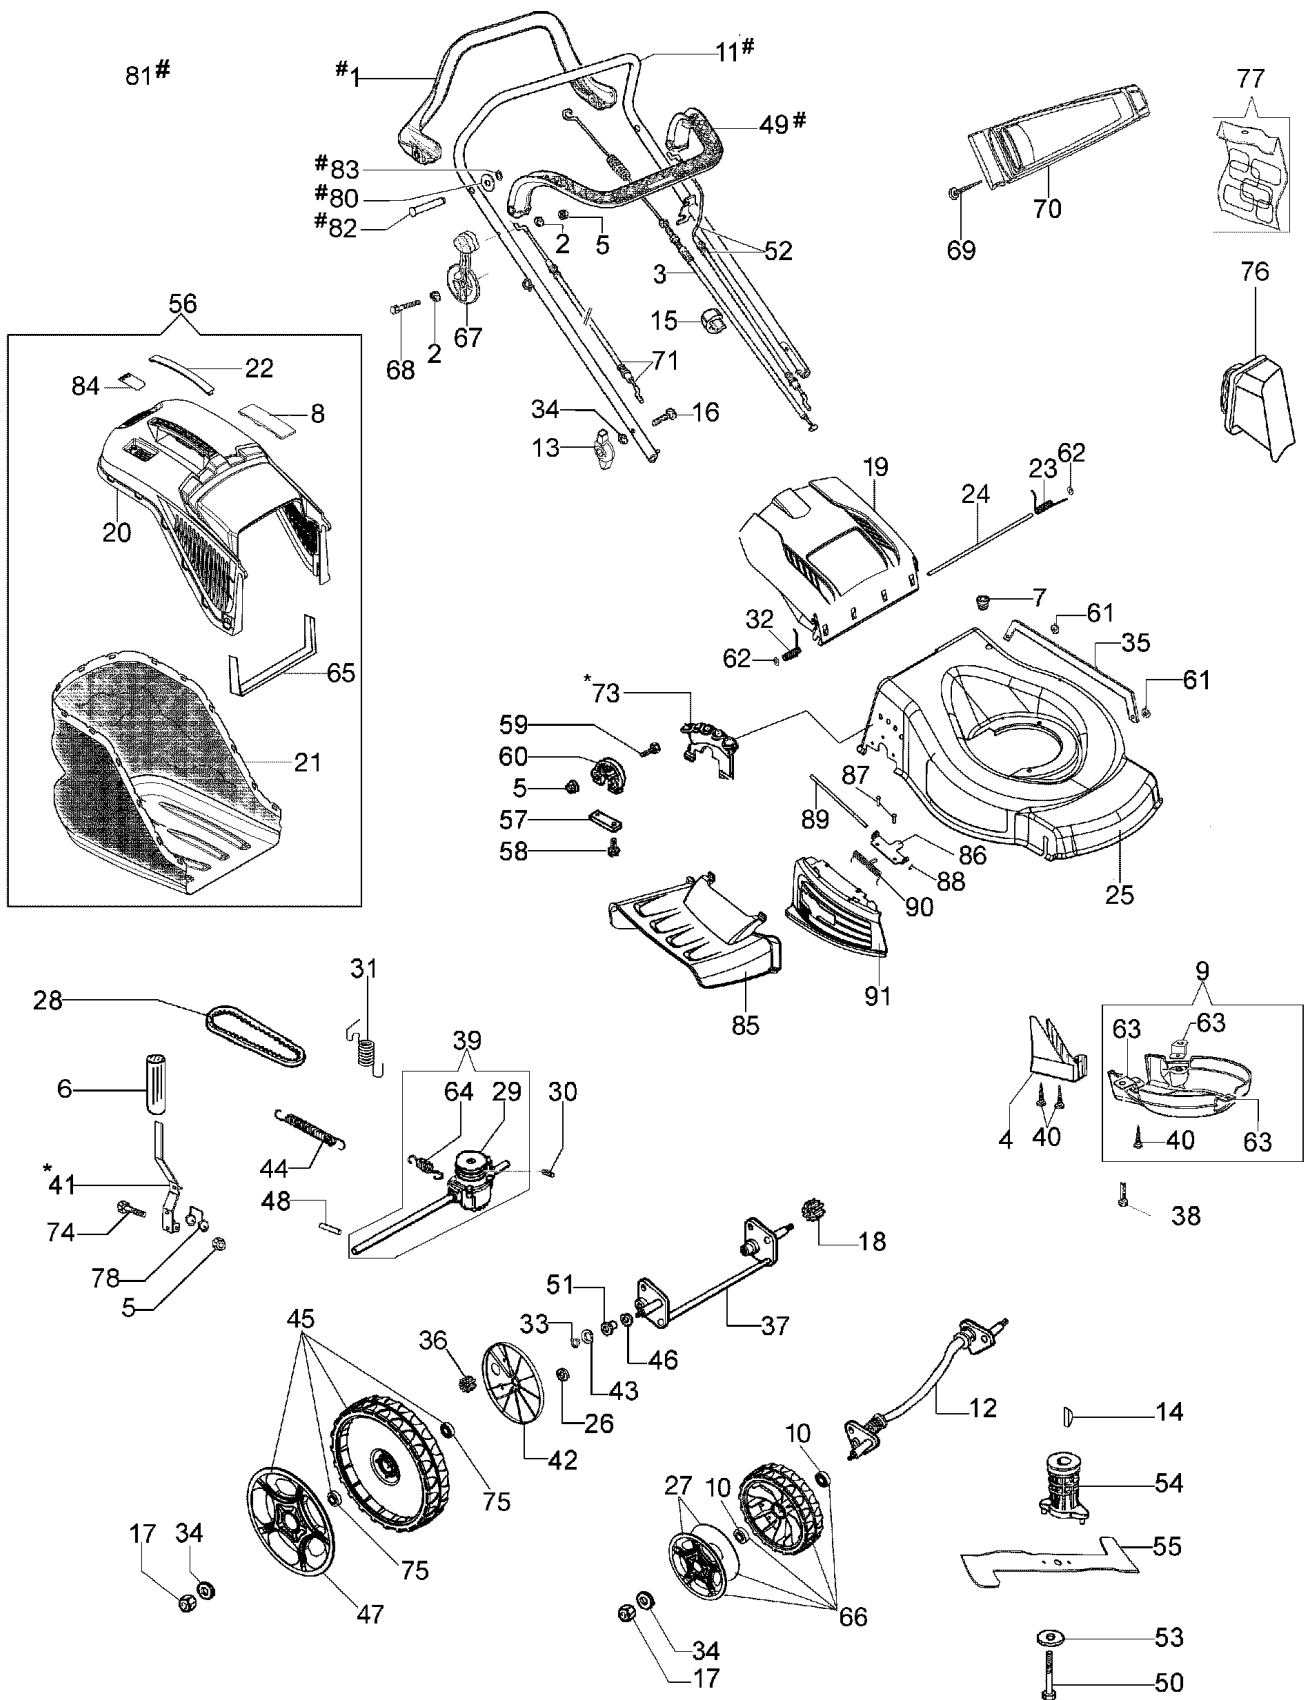

## Иллюстрация Illustrated parts list

Ссылка	Кол-во	Код артикула	Наименование
47	2	66070574R	Wheel cover
48	1	66060010R	Roller
49	1	66060316AR	Brake lever
50	1	3906150R	Screw
51	2	66060030R	Bushing
52	1	66070182R	Engine break cable
53	1	66060384R	Washer
54	1	66030256R	Hub $\phi$ 22,2mm
55	1	66070440R	Mulching blade
56	1	66070630	Grassbag kit
57	2	66030039	Plate
58	4	3960031R	Screw
59	6	3801022	Screw
60	2	66030049	Support
61	2	3045035R	Retainer washer
62	2	3045034R	Retainer washer
63	3	66070228R	Support
64	1	66070099R	Spring
65	1	66070133R	Support
66	2	66070626	Wheel kit
67	1	66070341R	Throttle lever
68	1	3910019	Screw
69	2	3960072	Screw
70	1	66070134R	Dashboard
71	1	66070136R	Throttle cable
73	1	66070291R	Support
74	1	3906164R	Screw
75	4	3035023R	Bearing
76	1	66070096R	Mulching cap
77	1	66070628	Labels set
78	1	8203374R	Spring
79	1	66070439A	Lever group
80	2	3064037	Washer
81	1	66060425R	Handle kit
82	2	66060381AR	Pin
83	2	3024006	Snap ring
84	1	66070521R	Shutter
85	1	66070479R	Deflector
86	1	66070476R	Support
87	2	3032018R	Rivet
88	1	3026005R	Ring
89	1	66070477R	Pin
90	1	66070493R	Spring
91	1	66070478R	Shutter
  
# Иллюстрация Cylinder head and valve

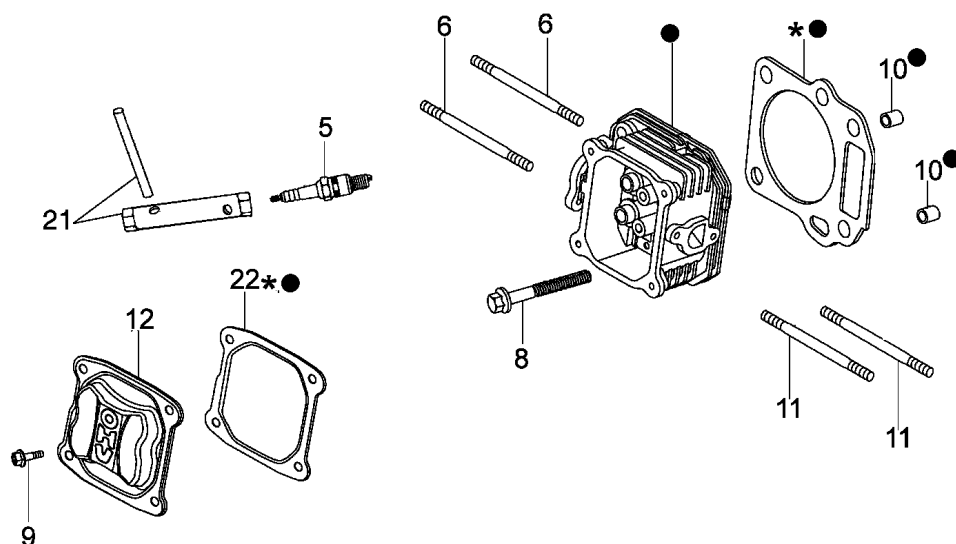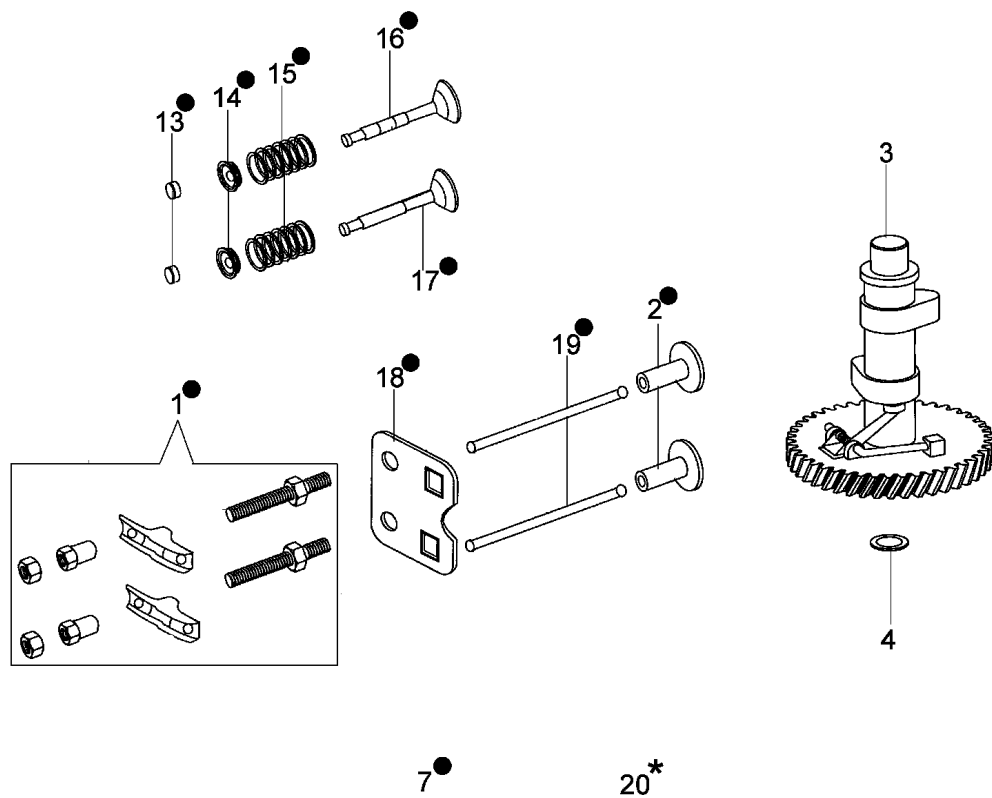


## Иллюстрация Cylinder head and valve

---

Ссылка	Кол-во	Код артикула	Наименование
1	2	L66150368	Rocker arm
2	2	L66150403	Slide
3	1	L66150102A	Camshaft assy
4	1	L66150399	Washer
5	1	3055123	Spark plug
6	4	L66150396	Stud
7	1	L66150221	Head comp.cylinder
8	4	L66150005	Screw
9	4	L66150393	Screw
10	2	L66150350	Pin
11	2	L66150241	Stud
12	1	L66150394	Shutter
13	2	L66150364	Valve
14	2	L66150365	Ring
15	2	L66150366	Spring Valve
16	1	L66150091	Intake valve
17	1	L66150472	Exhaust valve
18	1	L66150096	Plate
19	2	L66150098A	Equalizer rod
20	1	L66150245	Gasket set
21	1	66060414	19 x 21 mm wrench
22	1	L66150471	Oil seal

# Иллюстрация Cylinder and crankcase

 ---

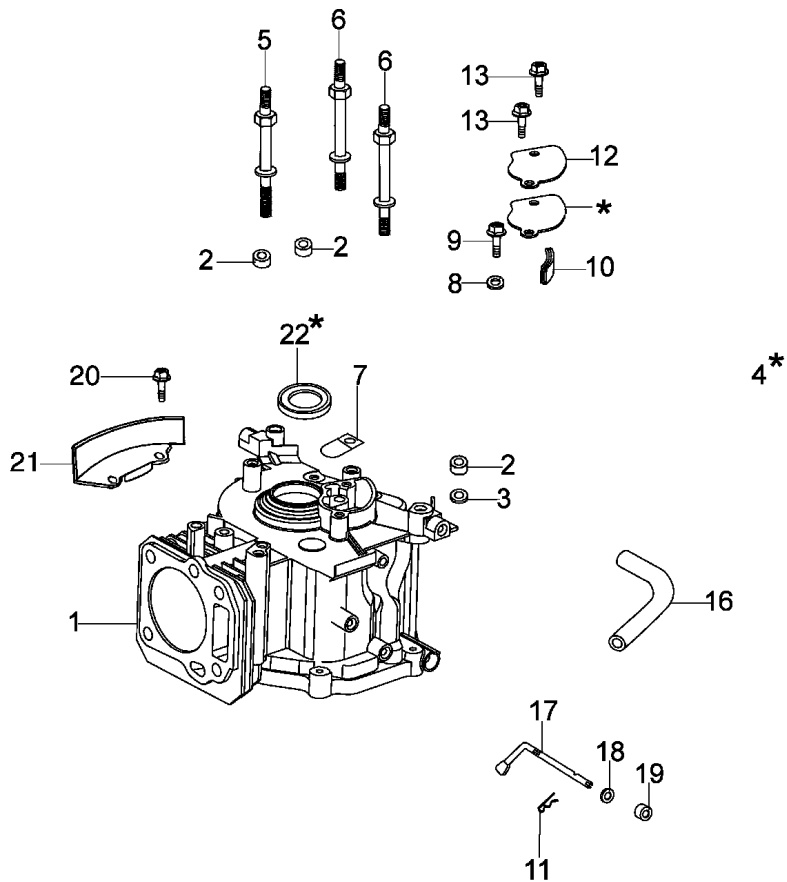


## Иллюстрация Cylinder and crankcase

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150242	Crank case comp.
2	3	L66150043	Bushing
3	3	L66150042	Bushing
4	1	L66150245	Gasket set
5	1	L66150407	Stud
6	2	L66150408	Stud
7	1	L66150410	Reed valve
8	1	L66150035	Washer
9	1	L66150411	Screws
10	1	L66150024	Filter,breather
11	1	L66150353	Pin
12	1	L66150244	Cap,breather chamber
13	2	L66150414	Screws
16	1	L66150246	Hose
17	1	L66150417	Shaft,governor arm
18	1	L66150035	Washer
19	1	L66150419	Oil seal
20	2	L66150251	Screw
21	1	L66150406	Shield,tank side
22	1	L66150409	Sealing ring


 
# Иллюстрация Crankcase cover




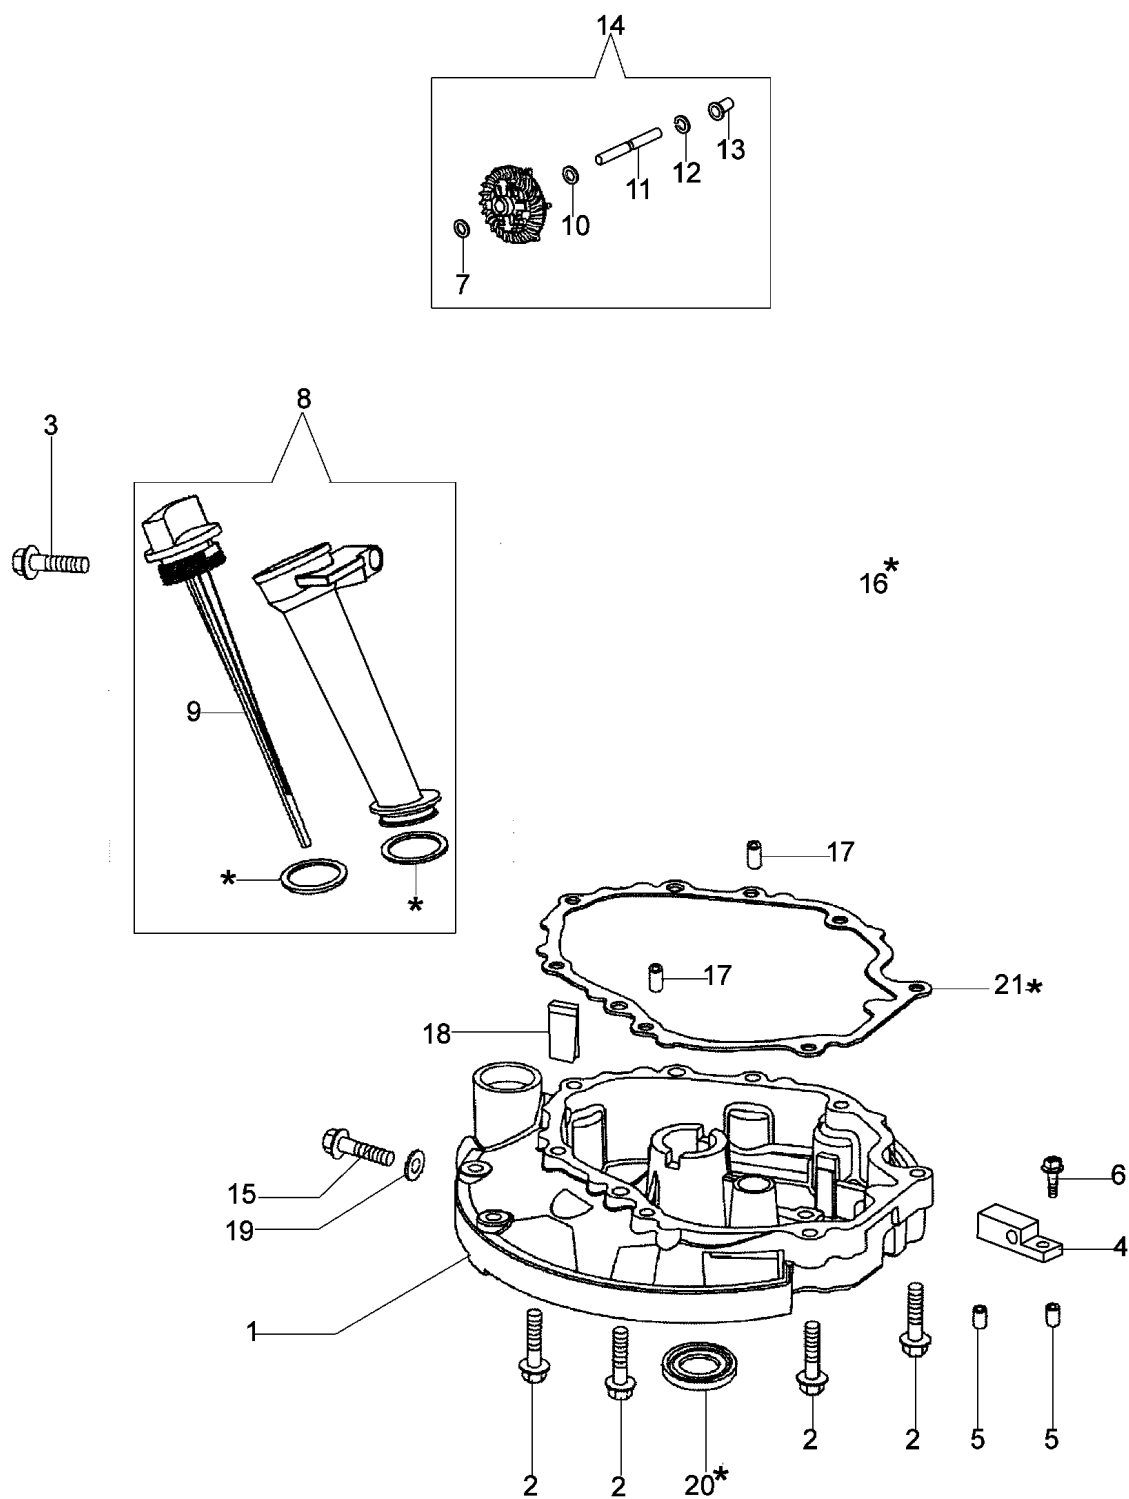


## Иллюстрация Crankcase cover

---

Ссылка	Кол-во	Код артикула	Наименование
1	К 1	L66150247	Cover
2	4	L66150047	Screw
3	1	L66150453	Screw
4	1	L66150454	Plate,governor holder
5	2	L66150455	Bushing
6	1	L66150456	Screw
7	1	L66150035	Washer
8	1	L66150458	Cap assy
9	1	L66150067	Oil cap
10	1	L66150053	Washer
11	1	L66150054	Shaft,governor
12	1	L66150304	Governor
13	1	L66150304	Governor
14	1	L66150457	Governor
15	1	L66150352	Screw
16	1	L66150245	Gasket set
17	2	L66150357	Pin
18	1	L66150232	Packing, breather chamber
19	1	L66150354	Washer
20	1	L66150462	Oil seal
21	1	L66150283	Oil seal
    
# Иллюстрация Crankshaft and piston


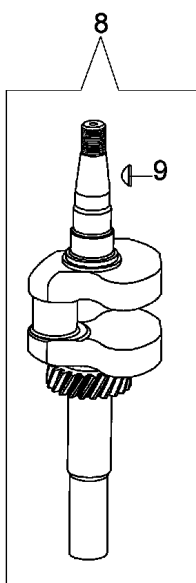
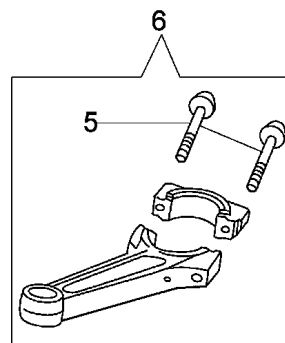
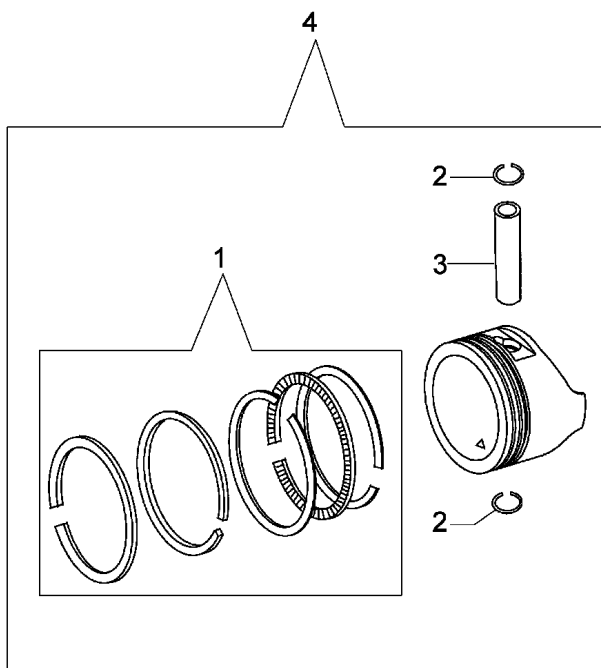


## Иллюстрация Crankshaft and piston

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150071	Piston ring set
2	2	L66150075	Snap ring
3	1	L66150077	Piston pin
4	1	L66150222	Piston assy
5	2	L66150078	Bolt,connecting rod
6	1	L66150080	Connecting rod set
7	1	L66150355	Bearing
8	1	L66150083	Crankshaft
9	1	L66150081	Key
10	1	L66150424	Washer

   
 
# Иллюстрация Starter assy and flywheel

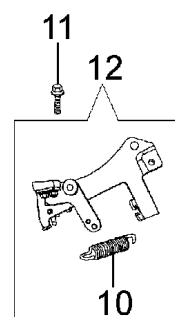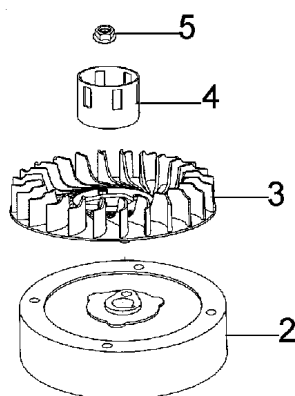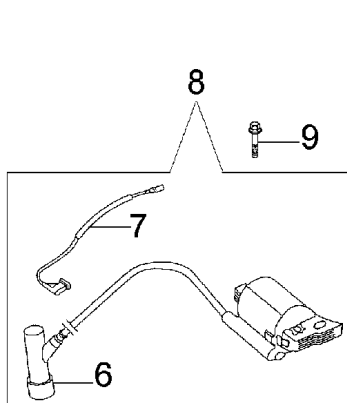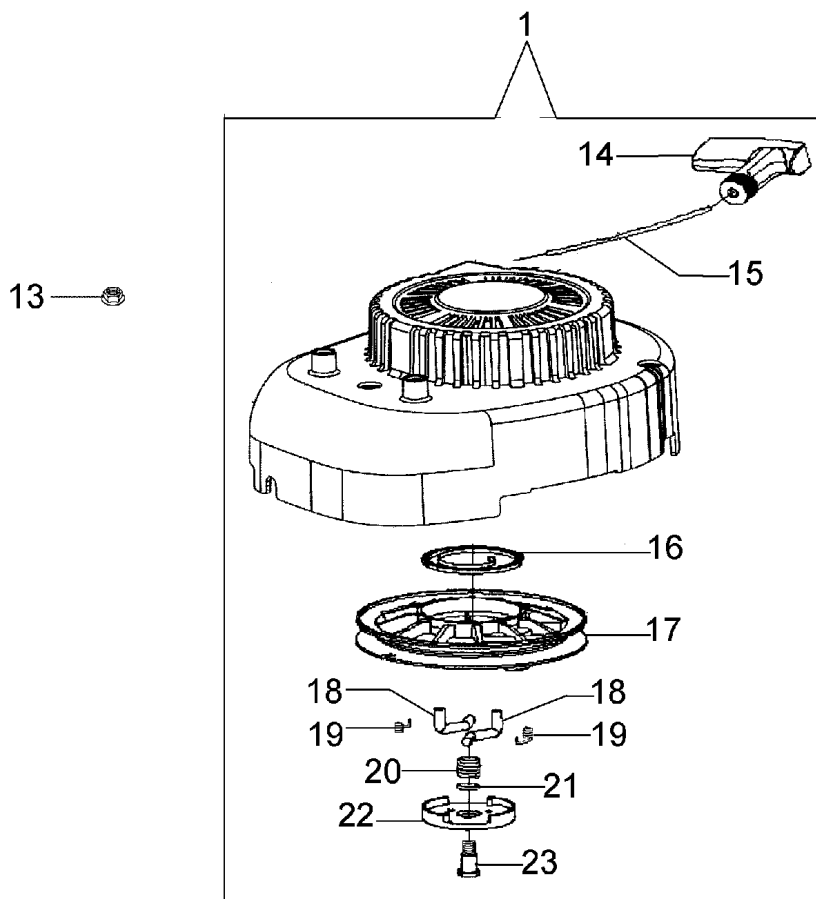

## Иллюстрация Starter assy and flywheel

---

  Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150248	Starter assy
2	1	L66150425	Flywheel
3	1	L66150426	Fan,cooling
4	1	L66150147	Pulley
5	1	L66150376	Nut,flange
6	1	L66150427	Spark plug cap
7	1	L66150150	Wire,stopping engine
8	1	L66150429	Ignition coil
9	1	L66150416	Screws
10	1	L66150257	Spring (brake)
11	2	L66150416	Screws
12	1	L66150415	Flyweheel brake
13	1	L66150113	Nut
14	1	L66150270	Knob,recoil starter
15	1	L66150269	Starter rope
16	1	L66150266	Spring,recoil starter
17	1	L66150265	Pulley
18	2	L66150263	Pawl
19	2	L66150264	Spring
20	1	L66150262	Spring
21	1	L66150261	Washer
22	1	L66150260	Slide
23	1	L66150259	Screws

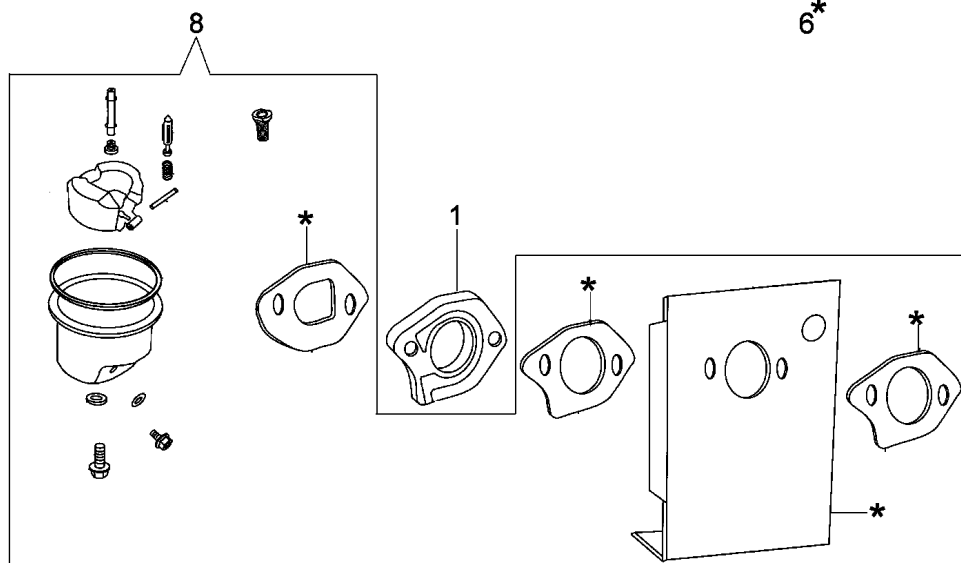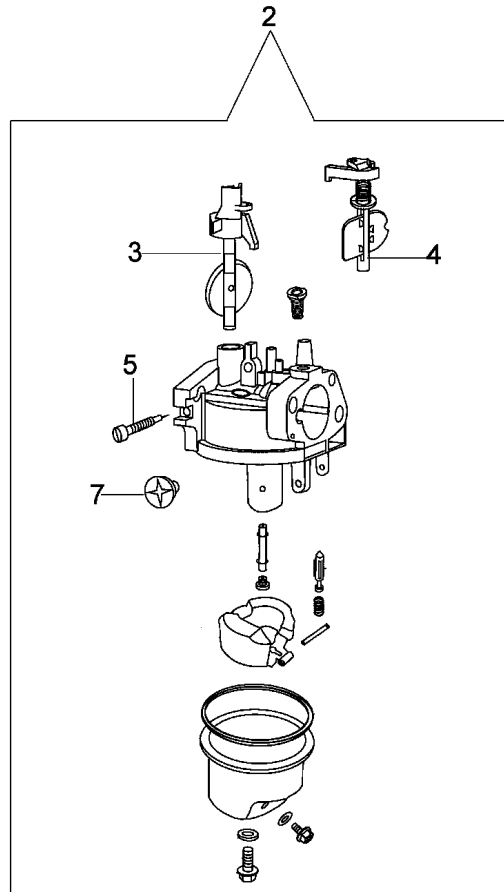



## Иллюстрация Carburettor

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150117A	Insulator
2	1	L66150143	Carburetor
3	1	L66150132	Throttle valve assy.
4	1	L66150135	Air lever
5	-	-	Not available for this product
6	1	L66150245	Gasket set
7	-	-	Not available for this product
8	1	L66150212	Repair parts


  
# Иллюстрация Air filter and muffler

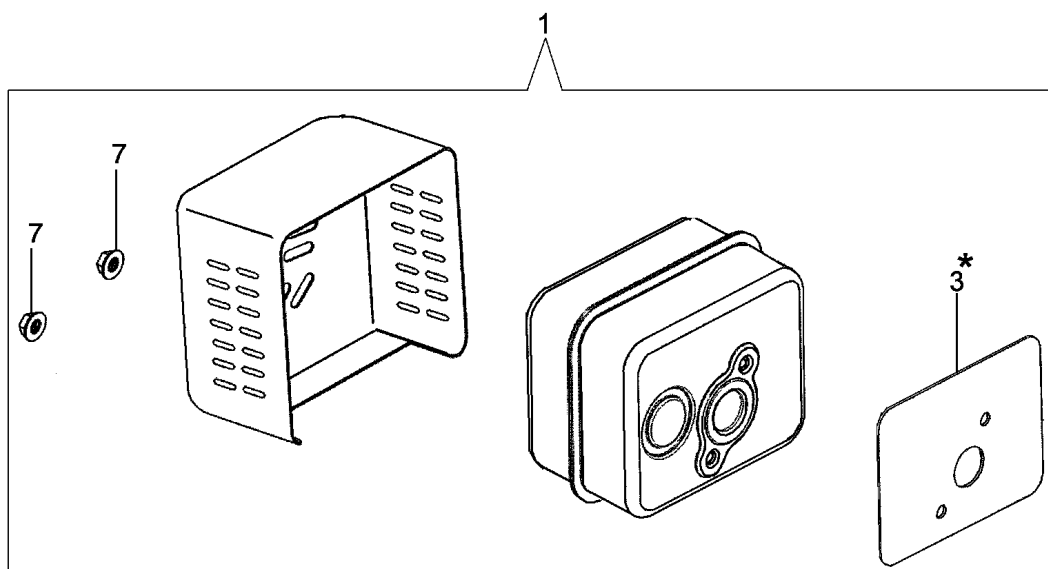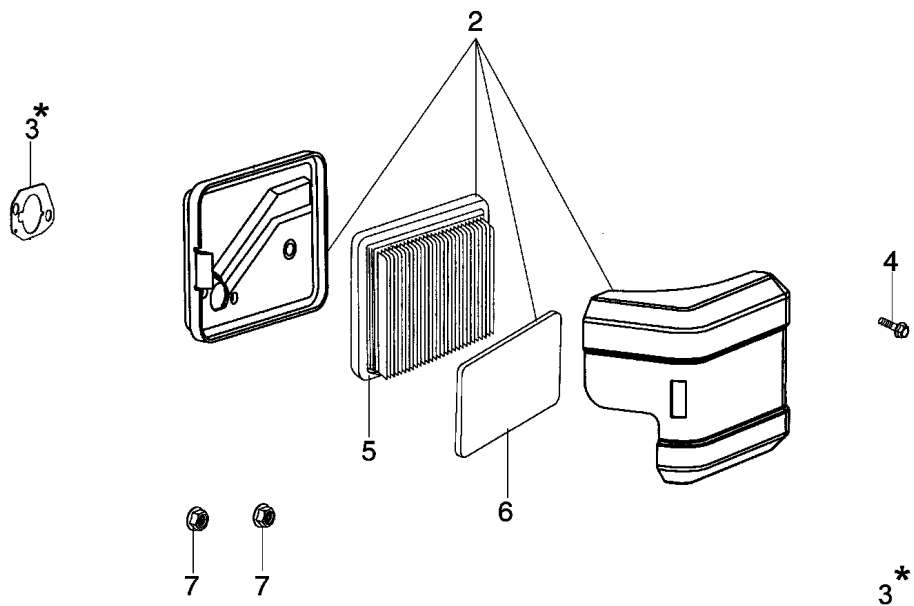




## Иллюстрация Air filter and muffler

---

Ссылка	Кол-во	Код артикула	Наименование
1	К 1	L66150443	Muffler assy.
2	1	L66150250	Air filter kit
3	1	L66150245	Gasket set
4	2	L66150251	Screw
5	1	L66150445	Air filter
6	1	L66150255	Sponge
7	4	L66150185	Nut

# Иллюстрация Control lever

   ---

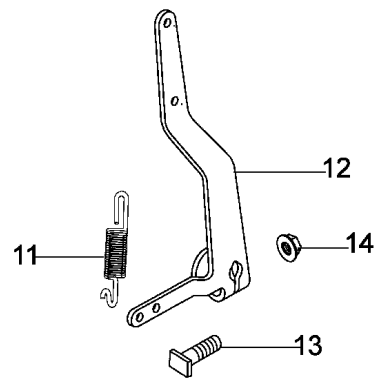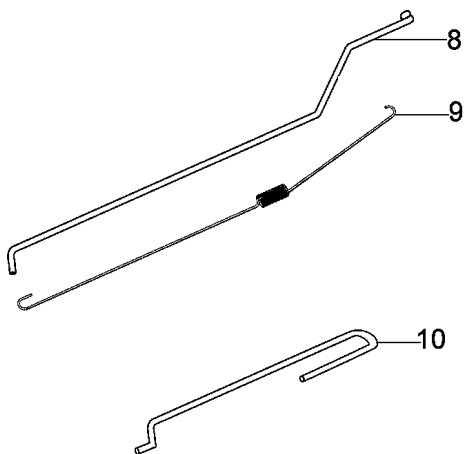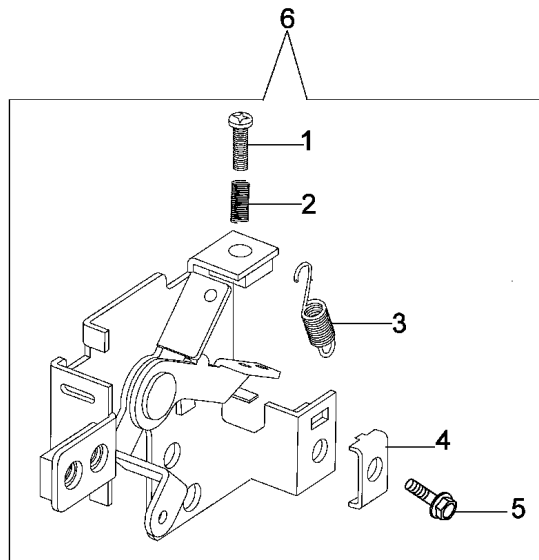



## Иллюстрация Control lever

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150168	Screw, control adjusting
2	1	L66150169	Spring
3	1	L66150170	Spring
4	1	L66150468	Plate
5	1	L66150172	Bolt m5x16
6	1	L66150470	Complete lever
7	2	L66150464	Screws
8	1	L66150236	Rod
9	1	L66150237	Spring
10	1	L66150178	Throttle rod
11	1	L66150180	Spring
12	1	L66150182	Control lever
13	1	L66150382	Bolt, flange
14	1	L66150185	Nut

# Иллюстрация Fuel tank and cover

  ---

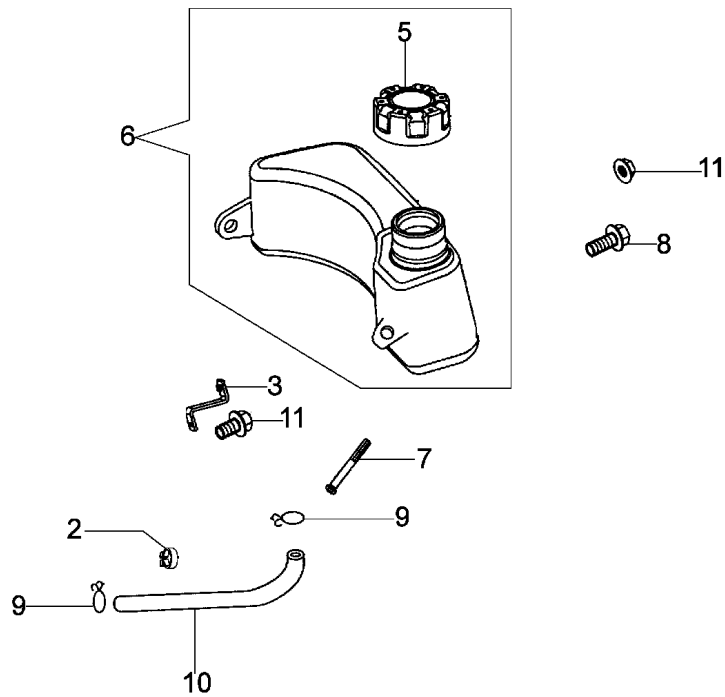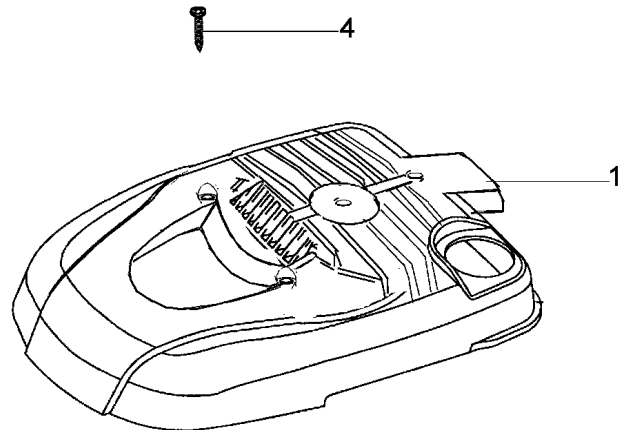

## Иллюстрация Fuel tank and cover

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	L66150234	Cover
2	1	L66150440	Clip
3	1	L66150239	Stud
4	3	L66150240	Screw
5	1	L66150437	Plug
6	1	L66150253	Complete tank
7	1	L66150439	Filter
8	1	L66150239	Stud
9	2	L66150435	Clip
10	1	L66150432	Tube
11	1	L66150464	Screws