

BCH 40 T Brushcutter



Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

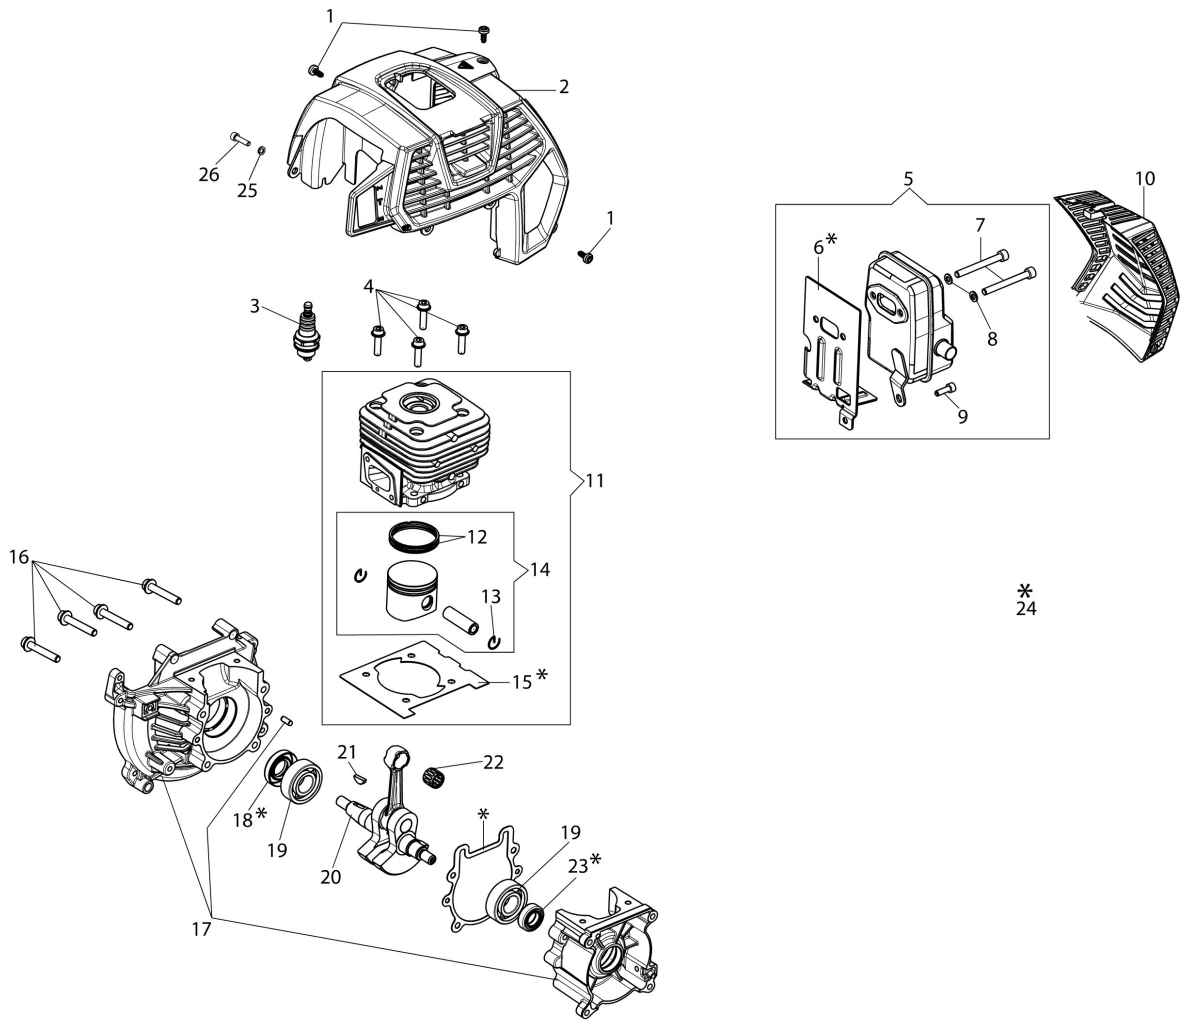


Illustration Engine

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|-------------------|---------------|---------------|-------|----------|
| 1 | 3 | 3960121R | Screw | | | | |
| 2 | 1 | 61452028R | Engine cover | | | | |
| 3 | 1 | 3055104R | Spark plug | | | | |
| 4 | 4 | 3860095R | Screw | | | | |
| 5 | 1 | 61450206R | Muffler assy | | | | |
| 6 | 1 | 61450242AR | Gasket | | | | |
| 7 | 2 | 3801065R | Screw | | | | |
| 8 | 2 | 3916006R | Washer | | | | |
| 9 | 1 | 3801011R | Screw | | | | |
| 10 | 1 | 61450367R | Muffler cover | | | | |
| 11 | 1 | 61450442 | Complete cylinder | | | | |
| 12 | 2 | 61450014R | Piston ring | | | | |
| 13 | 2 | 61450013R | Ring | | | | |
| 14 | 1 | 61450187R | Piston assy | | | | |
| 15 | 1 | 61450127AR | Gasket | | | | |
| 16 | 4 | 3860096R | Screw | | | | |
| 17 | 1 | 61452001BR | Crankcase assy | | | | |
| 18 | 1 | 3050056R | Oil seal | | | | |
| 19 | 2 | 3035065R | Bearing | | | | |
| 20 | 1 | 61450001AR | Crankshaft | | | | |
| 21 | 1 | 3028020R | Key | | | | |
| 22 | 1 | 50110044R | Bearing | | | | |
| 23 | 1 | 3050057R | Oil seal | | | | |
| 24 | 1 | 61450443 | Gasket set | | | | |
| 25 | 2 | 3801009 | Screw | | | | |
| 26 | 2 | 3916005R | Washer | | | | |

Illustration Starter assy and clutch

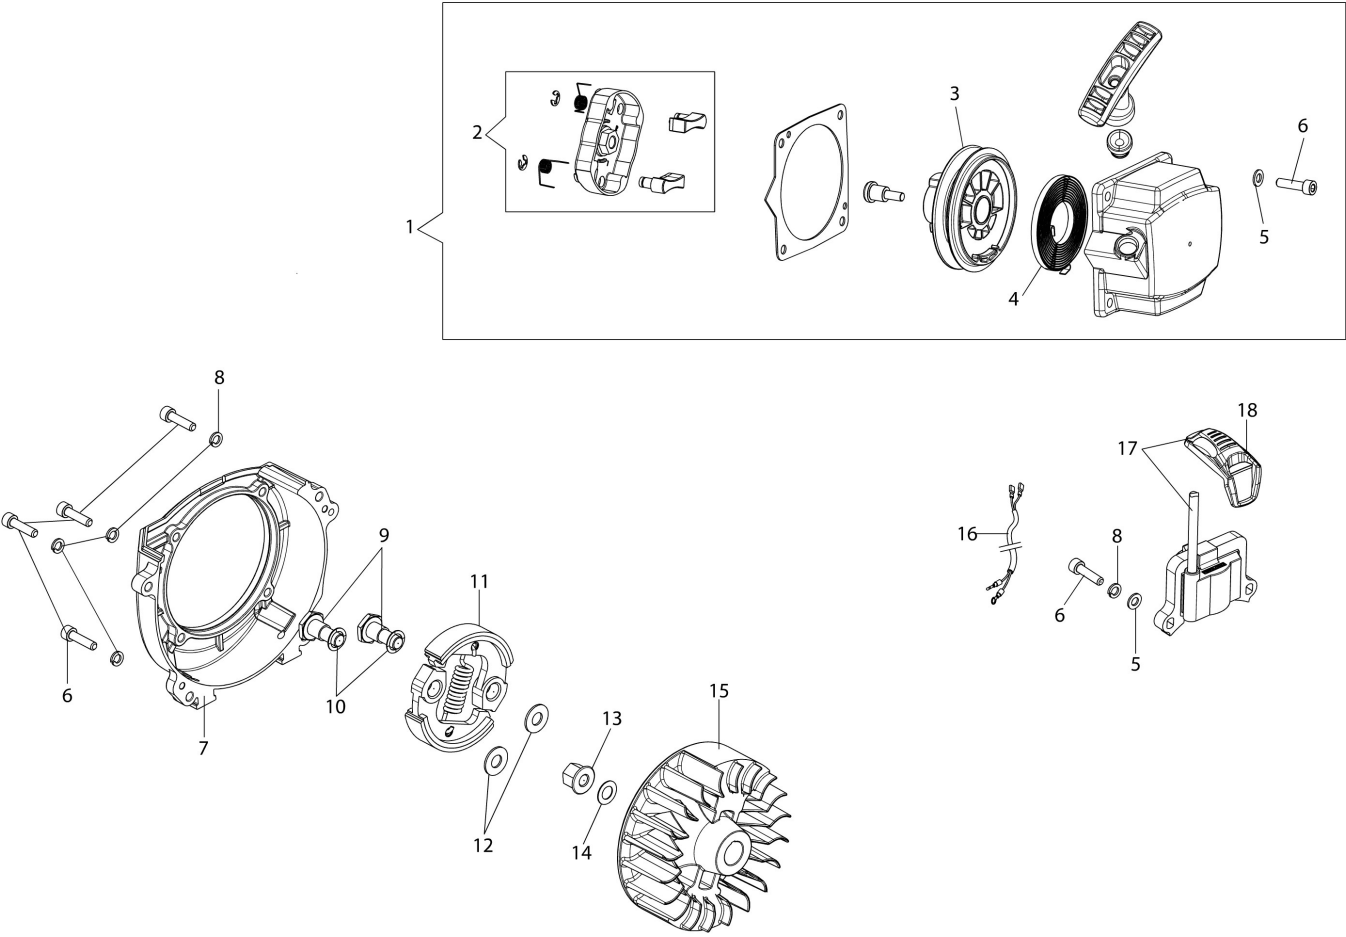


Illustration Starter assy and clutch

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|----------------|---------------|---------------|-------|----------|
| 1 | 1 | 61450192R | Starter assy | | | | |
| 2 | 1 | 61450193AR | Clutch driver | | | | |
| 3 | 1 | 61450229AR | Starter pulley | | | | |
| 4 | 1 | 61450044AR | Starter spring | | | | |
| 5 | 6 | 3916005R | Washer | | | | |
| 6 | 10 | 3801013R | Screw | | | | |
| 7 | 1 | 61452083R | Flange | | | | |
| 8 | 6 | 3819006R | Washer | | | | |
| 9 | 2 | 61450070R | Pin | | | | |
| 10 | 2 | 61450072R | Washer | | | | |
| 11 | 1 | 61450277R | Clutch | | | | |
| 12 | 2 | 61450071R | Washer | | | | |
| 13 | 1 | 50010148R | Nut | | | | |
| 14 | 1 | 3833080R | Washer | | | | |
| 15 | 1 | 61450310R | Flywheel | | | | |
| 16 | 1 | 61450037R | Cable | | | | |
| 17 | 1 | 2501026BR | Ignition coil | | | | |
| 18 | 1 | 61450370R | Spark plug cap | | | | |

Illustration Tank and air filter

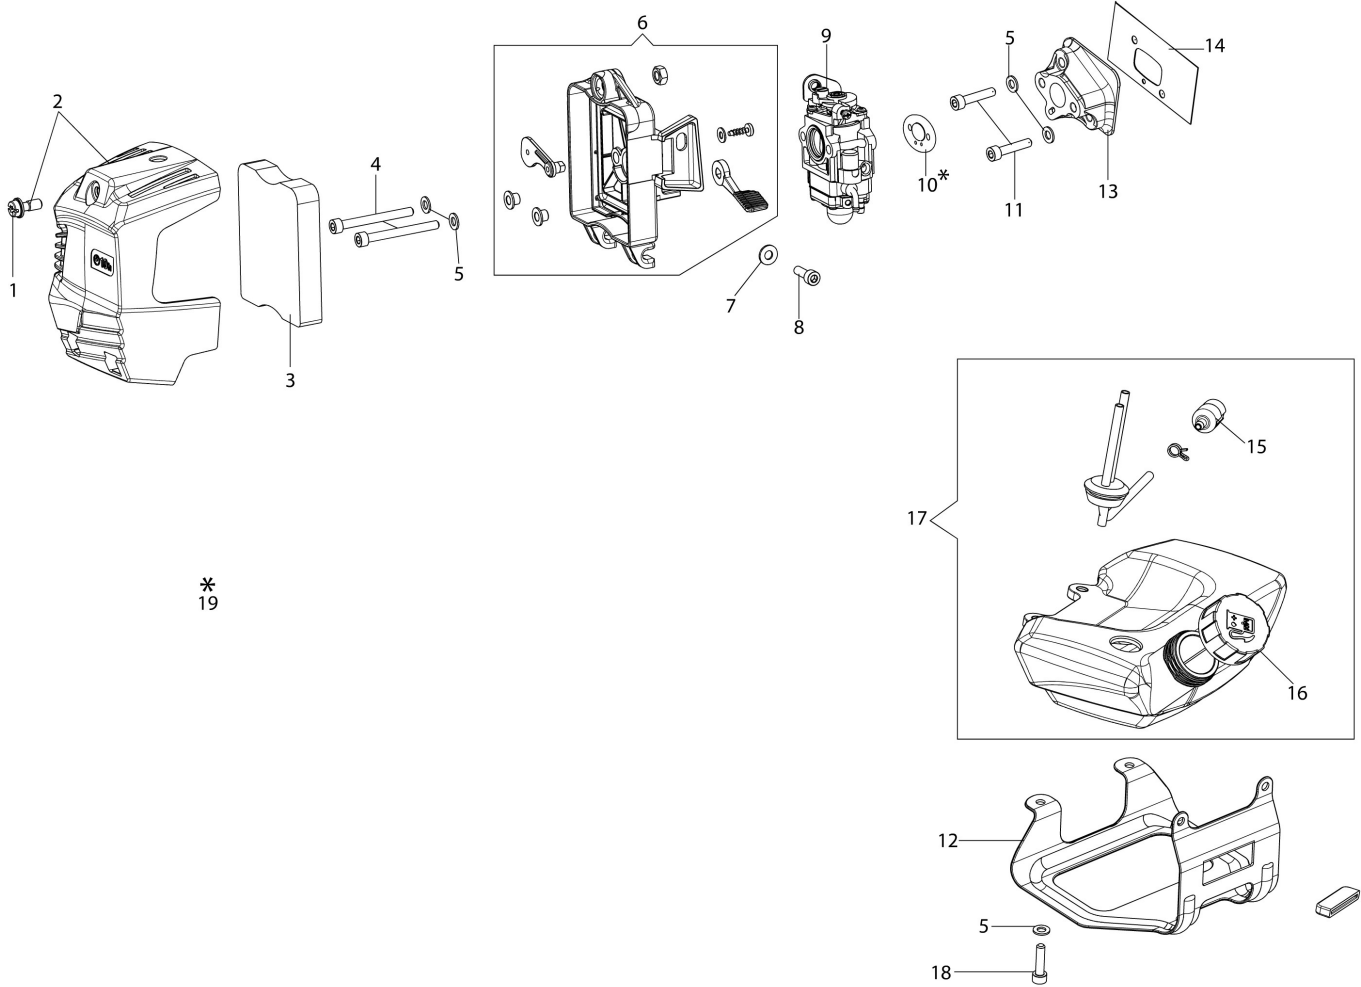


Illustration Tank and air filter

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|--------------------|---------------|---------------|-------|----------|
| 1 | 1 | 61330040AR | Screw | | | | |
| 2 | 1 | 61450444 | Air filter cover | | | | |
| 3 | 1 | 61450061R | Air filter | | | | |
| 4 | 2 | 3801012 | Screw | | | | |
| 5 | 4 | 3916005R | Washer | | | | |
| 6 | 1 | 61450445 | Air filter support | | | | |
| 7 | 1 | 3918010R | Washer | | | | |
| 8 | 1 | 3801011R | Screw | | | | |
| 9 | 1 | 2318624R | Carburetor | | | | |
| 10 | 1 | 61450054AR | Gasket | | | | |
| 11 | 2 | 3801015R | Screw | | | | |
| 12 | 1 | 61450082R | Tank shield | | | | |
| 13 | 1 | 61450053AR | Insulator | | | | |
| 14 | 1 | 61450052AR | Gasket | | | | |
| 15 | 1 | 094600450R | Fuel filter | | | | |
| 16 | 1 | 61450363R | Tank cap | | | | |
| 17 | 1 | 61452050R | Tank assy | | | | |
| 18 | 2 | 3801013R | Screw | | | | |
| 19 | 1 | 61450443 | Gasket set | | | | |

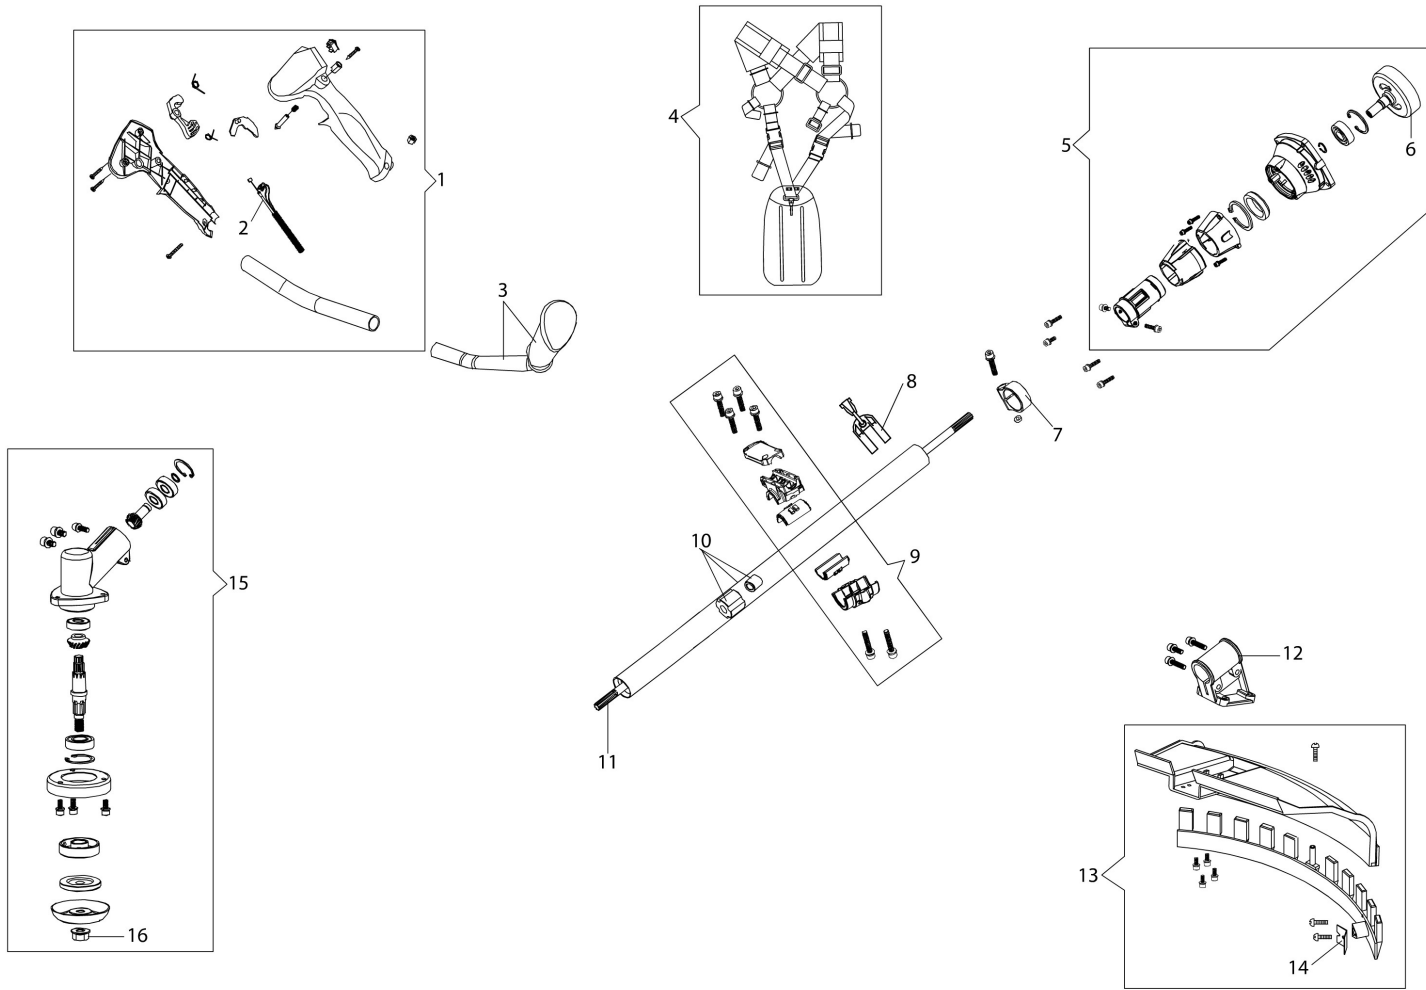


Illustration Transmission

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|-----------------|---------------|---------------|-------|----------|
| 1 | 1 | BF000023R | Complete handle | | | | |
| 2 | 1 | BF000016R | Throttle cable | | | | |
| 3 | 1 | BF000022R | Handle and knob | | | | |
| 4 | 1 | BF000020R | Harness | | | | |
| 5 | 1 | 61450327R | Starter case | | | | |
| 6 | 1 | BF000011R | Clutch drum | | | | |
| 7 | 1 | BF000012R | Band | | | | |
| 8 | 1 | BF000013R | Support | | | | |
| 9 | 1 | 61450328R | Complete clamp | | | | |
| 10 | 1 | BF000014R | Tube Ø26 | | | | |
| 11 | 1 | BF000015R | Drive shaft | | | | |
| 12 | 1 | BF000008R | Bracket | | | | |
| 13 | 1 | BF000029R | Guard kit | | | | |
| 14 | 1 | BF000009R | Blade | | | | |
| 15 | 1 | 61450441R | Bevel gear | | | | |
| 16 | 1 | BF000007R | Nut | | | | |