

BC 400 T Brushcutter



Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

Carburetor WT-1099

Accessories

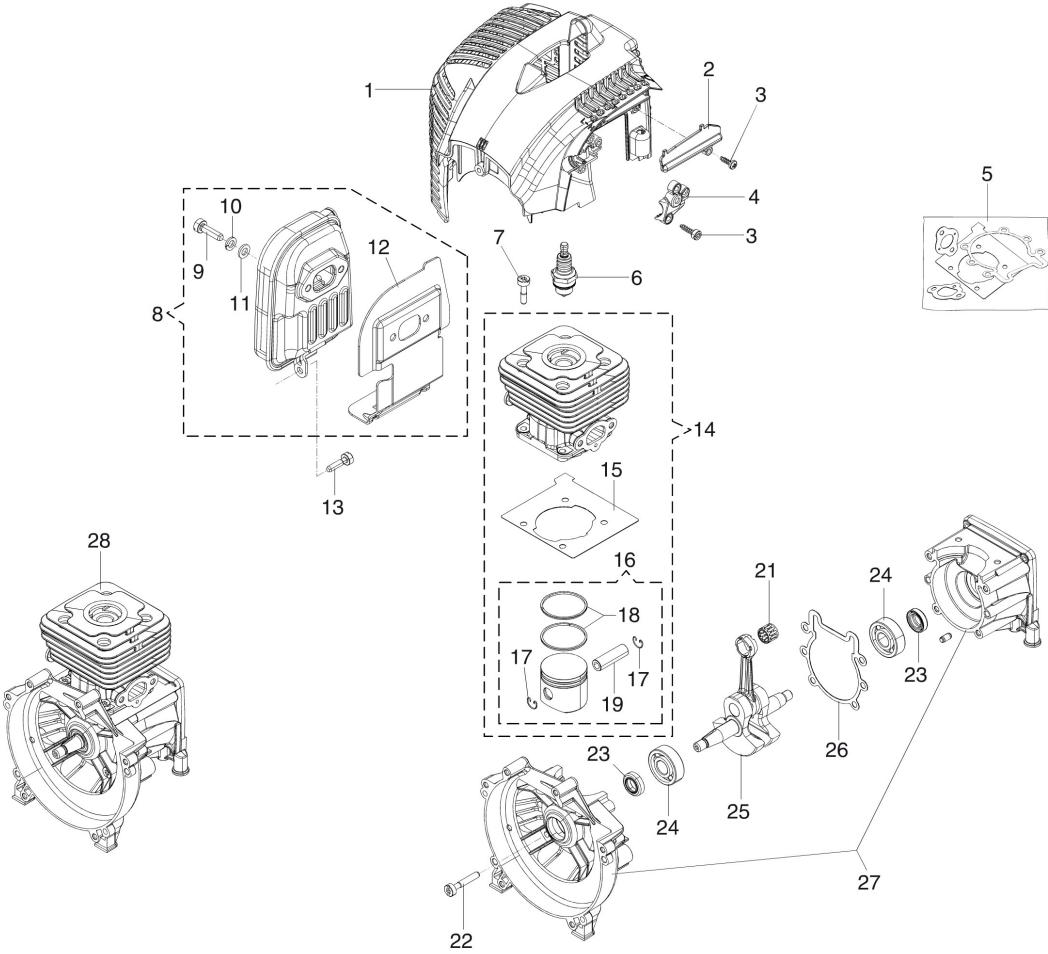


Illustration Engine

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|-----------------------|---------------|---------------|-------|----------|
| 1 | 1 | 61382031R | Engine cover | | | | |
| 2 | 1 | 61380050R | Cover | | | | |
| 3 | 4 | 3960087AR | Screw | | | | |
| 4 | 1 | 61250250R | Stopper for cable | | | | |
| 5 | 1 | 61202038BR | Gasket set | | | | |
| 6 | 1 | 3055118 | Spark plug | | | | |
| 7 | 4 | 3891048R | Screw | | | | |
| 8 | 1 | 61422017R | Muffler assy | | | | |
| 9 | 2 | 3891086R | Screw | | | | |
| 10 | 2 | 3819010R | Washer | | | | |
| 11 | 2 | 3916006R | Washer | | | | |
| 12 | 1 | 61380036AR | Deflector | | | | |
| 13 | 1 | 3891048R | Screw | | | | |
| 14 | 1 | 61350209C | Complete cylinder Ø42 | | | | |
| 15 | 1 | 61350272R | Gasket | | | | |
| 16 | 1 | 61350208 | Piston assy Ø42 | | | | |
| 17 | 2 | 007201198R | Ring | | | | |
| 18 | 2 | 50070128R | Piston ring Ø42 | | | | |
| 19 | 1 | 61350174R | Piston pin | | | | |
| 21 | 1 | 3037014R | Bearing | | | | |
| 22 | 4 | 3891057R | Screw | | | | |
| 23 | 2 | 094000099R | Seal ring | | | | |
| 24 | 2 | 094000006R | Bearing | | | | |
| 25 | 1 | 61350177BR | Crankshaft | | | | |
| 26 | 1 | 61200006AR | Gasket | | | | |
| 27 | 1 | 61350346 | Crankcase assy | | | | |
| 28 | 1 | 61352061ER | Short block | | | | |

Illustration Starter Assy and Clutch

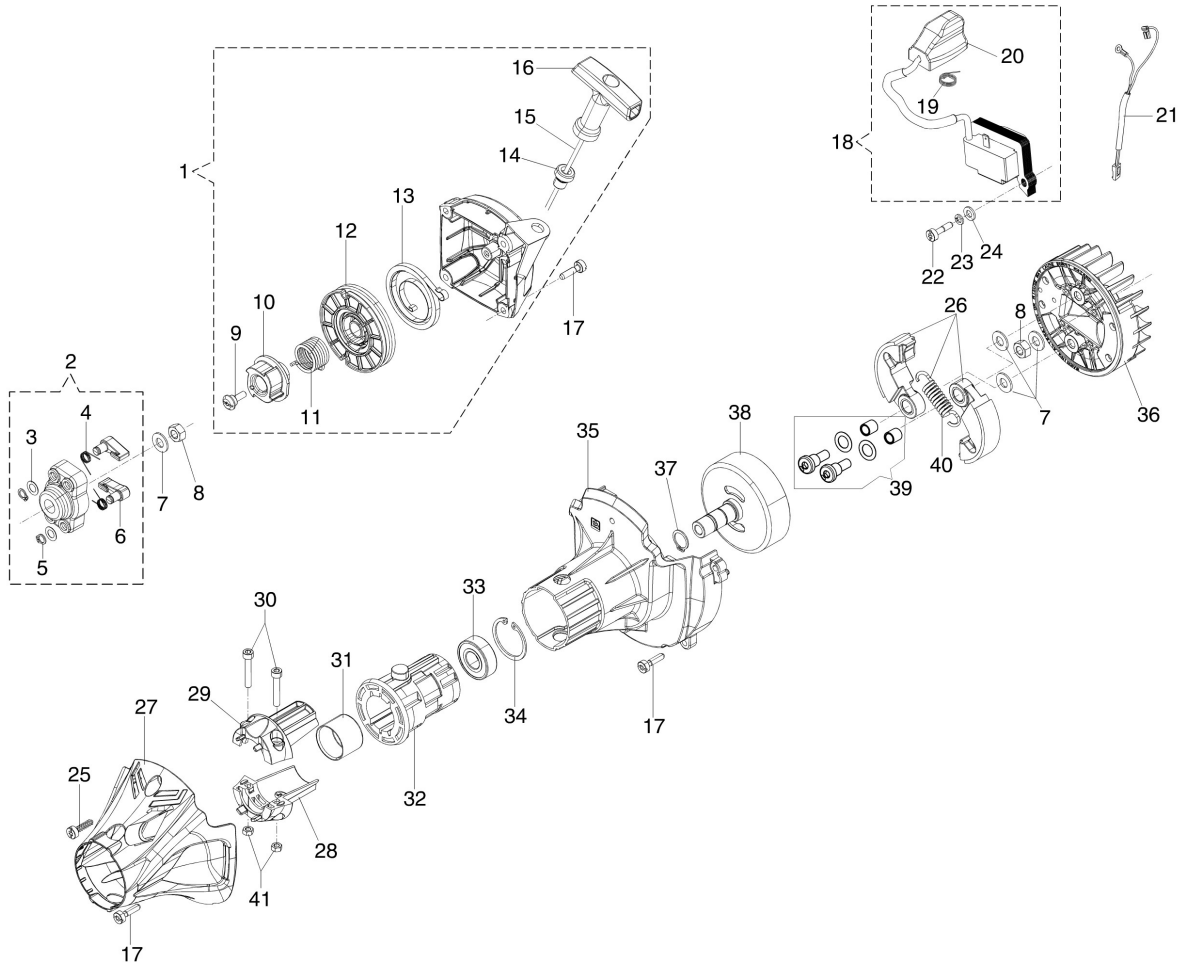


Illustration Starter assy and clutch

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|----------------|---------------|---------------|-------|----------|
| 1 | 1 | 61422004R | Starter assy | | | | |
| 2 | 2 | 61350142 | Clutch driver | | | | |
| 3 | 2 | 3064010R | Washer | | | | |
| 4 | 2 | 4191017A | Spring | | | | |
| 5 | 2 | 3024007R | Ring | | | | |
| 6 | 2 | 61350145R | Pawl | | | | |
| 7 | 4 | 3818011AR | Washer | | | | |
| 8 | 2 | 3912009 | Nut | | | | |
| 9 | 1 | 61350342R | Screw | | | | |
| 10 | 1 | 61350204AR | Sprocket | | | | |
| 11 | 1 | 61350203BR | Spring | | | | |
| 12 | 1 | 61350139R | Starter pulley | | | | |
| 13 | 1 | 004000132R | Spring | | | | |
| 14 | 1 | 072700089R | Bushing | | | | |
| 15 | 1 | 4098073R | Starter rope | | | | |
| 16 | 1 | 61200015R | Starter handle | | | | |
| 17 | 9 | 3891048R | Screw | | | | |
| 18 | 1 | 2501006AR | Ignition coil | | | | |
| 19 | 1 | 50050127 | Spring | | | | |
| 20 | 1 | 61380060R | Spark plug cap | | | | |
| 21 | 1 | 61250282AR | Cable | | | | |
| 22 | 2 | 3891046R | Screw | | | | |
| 23 | 2 | 3819006R | Washer | | | | |
| 24 | 2 | 3916006R | Washer | | | | |
| 25 | 1 | 3893060R | Screw | | | | |
| 26 | 1 | 4191153BR | Clutch | | | | |
| 27 | 1 | 61420022R | Cover | | | | |
| 28 | 1 | 61250020AR | Clamp | | | | |
| 29 | 1 | 61250019AR | Clamp | | | | |
| 30 | 2 | 3801016R | Screw | | | | |
| 31 | 1 | 4196038R | Bushing | | | | |
| 32 | 1 | 61250023AR | Sleeve | | | | |
| 33 | 1 | 3035042R | Bearing | | | | |
| 34 | 1 | 3025022R | Ring | | | | |
| 35 | 1 | 61430036R | Starter case | | | | |
| 36 | 1 | 61250014AR | Flywheel | | | | |
| 37 | 1 | 3024015R | Ring | | | | |
| 38 | 1 | 4191030R | Clutch drum | | | | |
| 39 | 2 | 61420020 | Fitment system | | | | |
| 40 | 1 | 4191028R | Spring | | | | |
| 41 | 2 | 3914003R | Nut | | | | |

Illustration Tank and air filter

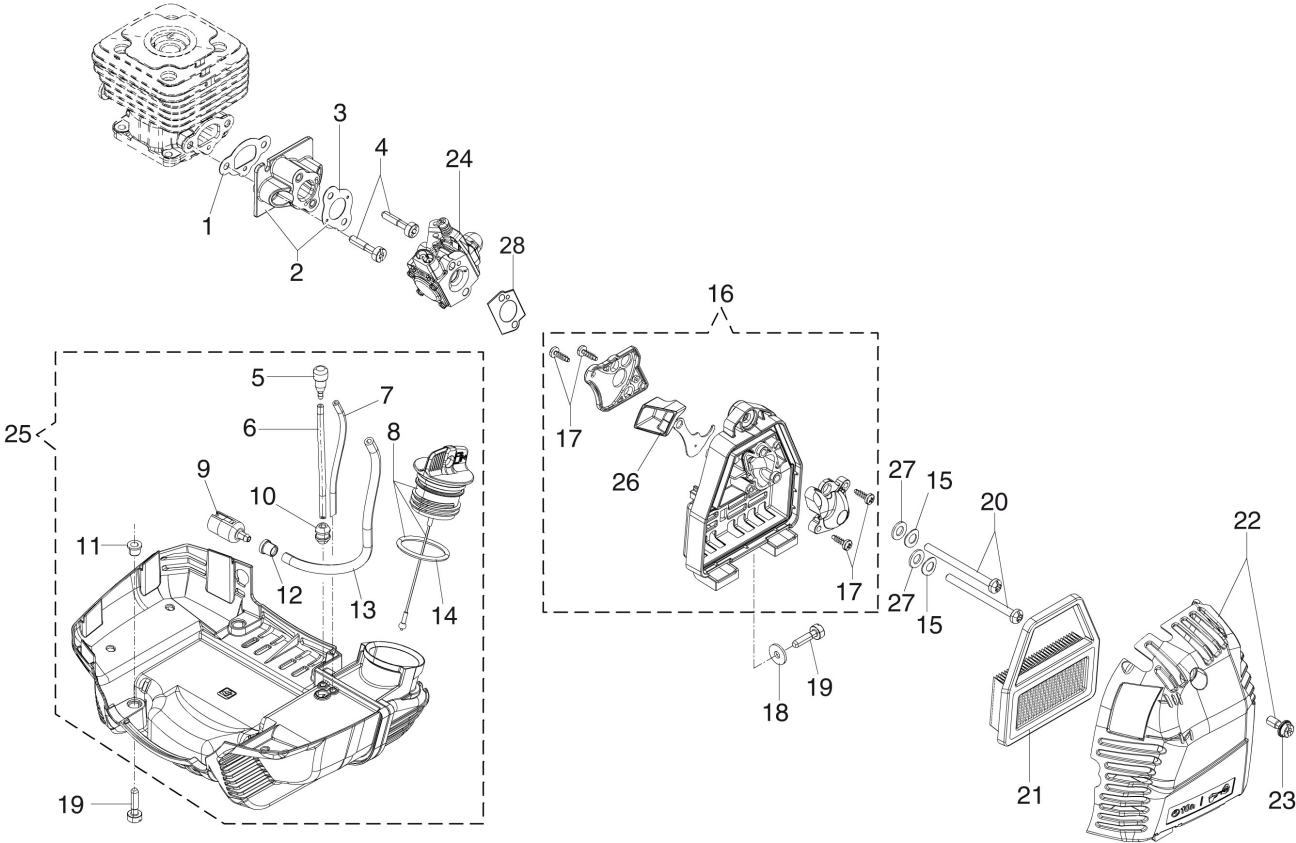


Illustration Tank and air filter

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|------------------------|---------------|---------------|-------|----------|
| 1 | 1 | 61200019AR | Gasket | | | | |
| 2 | 1 | 61200198 | Insulator | | | | |
| 3 | 1 | 61200196AR | Gasket | | | | |
| 4 | 2 | 3891050R | Screw | | | | |
| 5 | 1 | 61070011AR | Breather valve | | | | |
| 6 | 1 | 61380111R | Breather fuel pipe | | | | |
| 7 | 1 | 61380112R | Tube | | | | |
| 8 | 1 | 61380100 | Tank cap | | | | |
| 9 | 1 | 094600450R | Fuel filter | | | | |
| 10 | 1 | 4161211R | Bush | | | | |
| 11 | 4 | 61380017R | Spacer | | | | |
| 12 | 1 | 61110162BR | Bushing | | | | |
| 13 | 1 | 3073020R | Tube | | | | |
| 14 | 1 | 3049024R | Gasket | | | | |
| 15 | 2 | 3833073R | Washer | | | | |
| 16 | 1 | 61382040AR | Air filter support set | | | | |
| 17 | 4 | 3960087AR | Screw | | | | |
| 18 | 1 | 3918005R | Washer | | | | |
| 19 | 5 | 3891048R | Screw | | | | |
| 20 | 2 | 3891067R | Screw | | | | |
| 21 | 1 | 61380013AR | Air filter | | | | |
| 22 | 1 | 61380099 | Air filter cover | | | | |
| 23 | 1 | 61330040AR | Screw | | | | |
| 24 | 1 | 2318987R | Carburetor WT-1099 | | | | |
| 25 | 1 | 61420008R | Tank | | | | |
| 26 | 1 | 61380074AR | Starter lever | | | | |
| 27 | 2 | 3916005R | Washer | | | | |
| 28 | 1 | 61350155R | Flange | | | | |

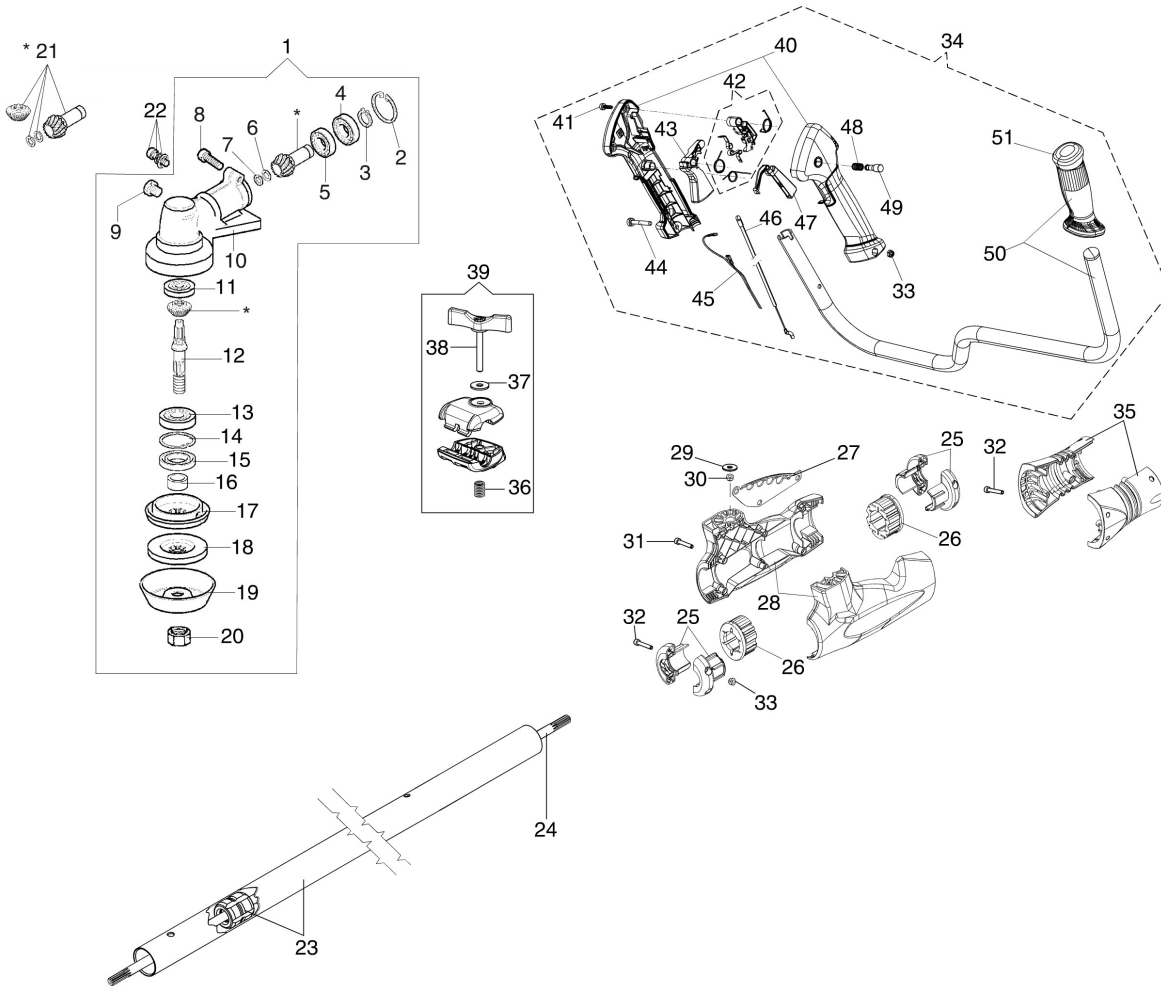


Illustration Transmission

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|-----------------|---------------|---------------|-------|----------|
| 1 | 1 | 61350149A | Bevel gear Ø28 | | | | |
| 2 | 1 | 3025019 | Ring | | | | |
| 3 | 1 | 3024012R | Snap ring | | | | |
| 4 | 1 | 3035023R | Bearing | | | | |
| 5 | 1 | 3034019R | Bearing | | | | |
| 6 | 1 | 4138311A | Ring | | | | |
| 7 | 1 | 3025009 | Ring | | | | |
| 8 | 1 | 3901016 | Screw | | | | |
| 9 | 1 | 61040071R | Cap | | | | |
| 10 | 1 | 61040144R | Gear case | | | | |
| 11 | 1 | 3034218R | Bearing | | | | |
| 12 | 1 | 61250054R | Pin | | | | |
| 13 | 1 | 3034012R | Bearing | | | | |
| 14 | 1 | 3025022R | Ring | | | | |
| 15 | 1 | 3050018R | Seal ring | | | | |
| 16 | 1 | 61040066R | Spacer | | | | |
| 17 | 1 | 61040145R | Hub | | | | |
| 18 | 1 | 4179089R | Flange | | | | |
| 19 | 1 | 61110074R | Guard | | | | |
| 20 | 1 | 61110075R | Nut | | | | |
| 21 | 1 | 61350216 | Bevel gear set | | | | |
| 22 | 1 | 3901008R | Screw | | | | |
| 23 | 1 | 61252049R | Tube Ø28 | | | | |
| 24 | 1 | 61202109R | Shaft | | | | |
| 25 | 4 | 61040110R | Clamp | | | | |
| 26 | 2 | 61250181R | Sleeve | | | | |
| 27 | 1 | 61250180R | Plate | | | | |
| 28 | 1 | 61420040 | Motor housing | | | | |
| 29 | 1 | 66030012R | Washer | | | | |
| 30 | 1 | 3980011 | Nut | | | | |
| 31 | 8 | 3960091AR | Screw | | | | |
| 32 | 1 | 3801016R | Screw | | | | |
| 33 | 1 | 3914003R | Nut | | | | |
| 34 | 1 | 61420039 | Complete handle | | | | |
| 35 | 1 | 61420042 | Compl. cover | | | | |
| 36 | 1 | 61040044R | Spring | | | | |
| 37 | 1 | 3918013R | Washer | | | | |
| 38 | 1 | 61042030R | Knob | | | | |
| 39 | 1 | 61370274A | Complete clamp | | | | |
| 40 | 1 | 61380097 | Pair of handles | | | | |
| 41 | 3 | 3893016AR | Screw | | | | |
| 42 | 1 | 61370294 | Lever group | | | | |
| 43 | 1 | 61380064R | Throttle lever | | | | |
| 44 | 1 | 3891054R | Screw | | | | |
| 45 | 1 | 61420025R | Cable | | | | |
| 46 | 1 | 61420024R | Throttle cable | | | | |

Illustration Transmission

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|-----------------|---------------|---------------|-------|----------|
| 47 | 1 | 61370114R | Lever | | | | |
| 48 | 1 | 4100098BR | Spring | | | | |
| 49 | 1 | 56550185R | Button | | | | |
| 50 | 1 | 61382024R | Handle and knob | | | | |
| 51 | 1 | 61040140R | Knob | | | | |

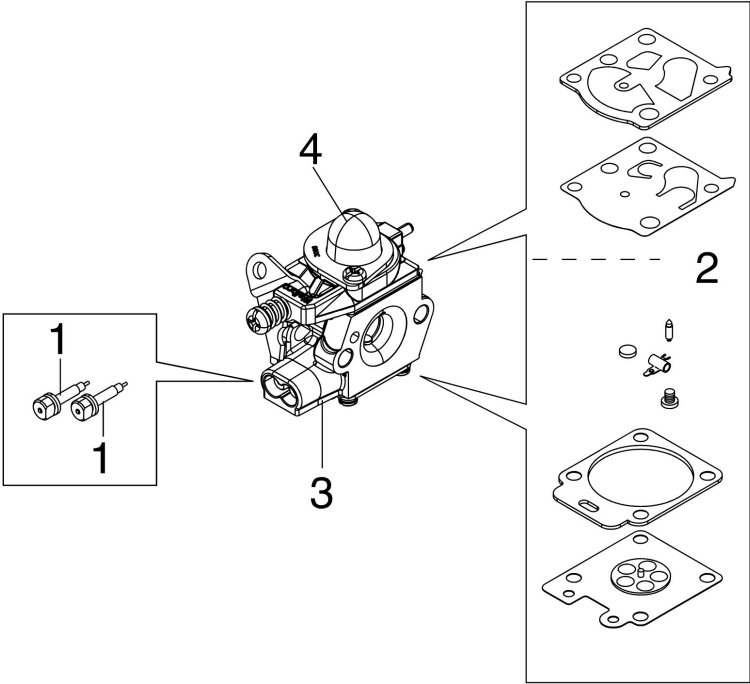


Illustration Carburetor WT-1099

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|--------------------|---------------|---------------|-------|----------|
| 1 | 2 | 2318667R | Adjust. screw | | | | |
| 2 | 1 | 2318671 | Repair kit | | | | |
| 3 | 1 | 2318987R | Carburetor WT-1099 | | | | |
| 4 | 1 | 2318572 | Primer pump | | | | |

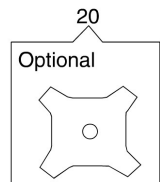
 
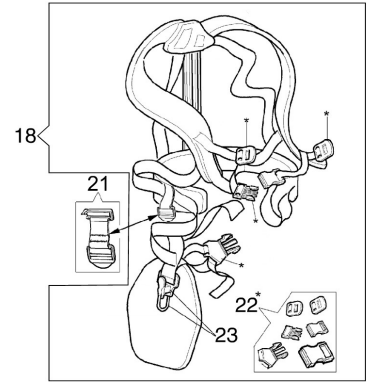
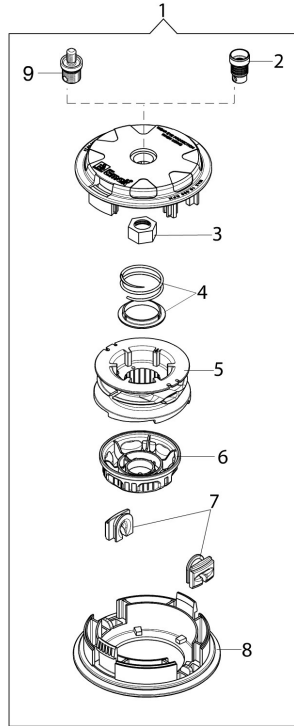
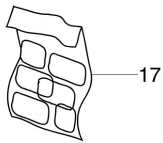
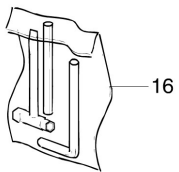
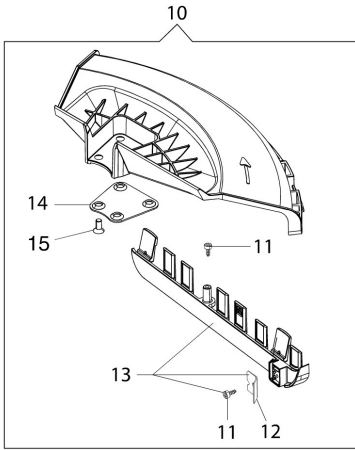


Illustration Accessories

| Ref.Nu | Qty | Part number | Description | Validity from | Validity till | Notes | Bulletin |
|--------|-----|-------------|---------------|---------------|---------------|-------|----------|
| 1 | 1 | 63129008 | Head Load&Go | | | | |
| 2 | 1 | 63120041R | Insert | | | | |
| 3 | 1 | 63120040R | Nut | | | | |
| 4 | 1 | 63120031R | Kit spring | | | | |
| 5 | 1 | 63120020AR | Ignition coil | | | | |
| 6 | 1 | 63120007AR | Knob | | | | |
| 7 | 2 | 63120001R | Bushing | | | | |
| 8 | 1 | 63120005R | Cover | | | | |
| 9 | 1 | 63120042R | Insert (male) | | | | |
| 10 | 1 | 61380125 | Guard kit | | | | |
| 11 | 2 | 3960040R | Screw | | | | |
| 12 | 1 | 4174275R | Blade | | | | |
| 13 | 1 | 61380126 | Skirt w/blade | | | | |
| 14 | 1 | 4174278R | Plate | | | | |
| 15 | 4 | 3802004DR | Screw | | | | |
| 16 | 1 | 61052031R | Tool kit | | | | |
| 17 | 1 | 61420037 | Labels kit | | | | |
| 18 | 1 | 63070003AR | Harness | | | | |
| 19 | 1 | 4095673BR | 3-tooth blade | | | | |
| 20 | 1 | 4095681AR | 4-tooth blade | | | | |
| 21 | 1 | 63070039R | Hook | | | | |